




AIR-CONDITIONER REMOTE CONTROLLER INSTRUCTIONS

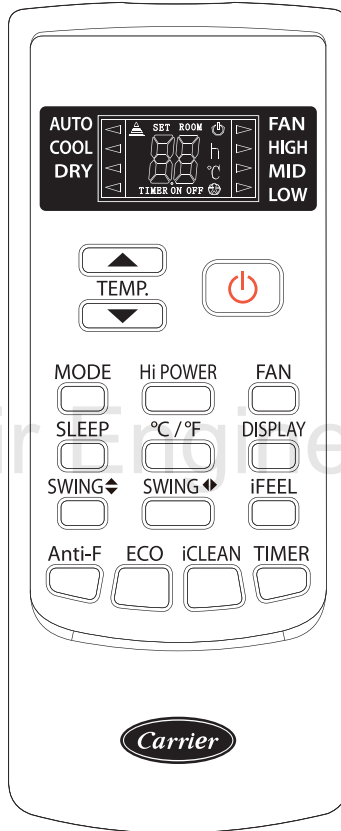

- Carefully read these “instructions” for safe and correct use of the air-conditioner.
- Carefully keep the “instructions” manual as it can be referred to at any time.


Precautions

- Before first time use of the remote controller, install the batteries and ensure that the “+” and “-” poles are correctly positioned.
- Ensure the remote controller is pointed to the signal receiving window, and that there is no obstruction in between and the distance is 8m at the maximum.
- Do not let the remote controller drop or fling it at will.
Do not let any liquid in the remote controller.
Do not expose the remote controller directly to the sunlight or excessive heat.
- If the remote controller does not work normally, remove the batteries for 30 seconds before reinstall them. If that doesn't work, replace the batteries.
- When replacing the batteries, do not mix the new batteries with old ones or mix batteries of different types, which could cause failure of the remote controller.
- If the remote controller is not to be used for a long period of time, remove the batteries first, lest the leakage from them may damage the remote controller.
- Properly dispose the discarded batteries.

Note:

This is a universal remote controller which provides all the function of buttons. Please understand that some of the buttons may not function, depending on the specific air conditioner you have purchased. (If a specific function is not available on the air conditioner, pressing the corresponding button will simply have no respond.)

Buttons description

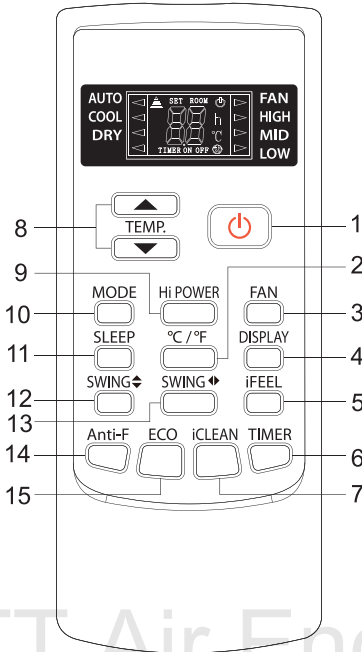

Note:
The remote controller display all symbols during power-on and only those corresponding to current operation the rest of the time.

1.

- * Press this button to turn on/off the unit.
- * This will clear the existing timer and SLEEP settings.

2. °C/°F

- * Press this button to set the temperature display to Fahrenheit, which is displayed by default in Celsius. The “°C” will not be displayed on the LCD.
- * Press this button again to restore the temperature display to Celsius.

Note: Temperature display in Fahrenheit is not available for some models. When temperature is displayed in Fahrenheit on the remote controller, it might be in Celsius on the unit, the function and operation of which will not be affected.

3. FAN

- * Press this button, you can select the fan speed as follows:

□ LOW → MID → HIGH □

Note: AUTO air speed is not available in FAN mode.

Buttons description

4. DISPLAY

- * Press this button to turn on/off the display. This is for the convenience of users who are unconformable sleeping with the backlight on.

5. iFEEL

- * Press this button to set the temperature display on the remote controller to ambient temperature and press this button again to set it to preset temperature.

6. TIMER

- * With the unit ON, press this button to set OFF timer or with it OFF to set ON timer.
- * Press this button once, a “ON(OFF)” will flash. Press “▲” or “▼” to set the number of hours in which the unit will be turned ON/OFF, with an interval of 0.5 hour if less than 10 hours, or 1 hour if longer than 10 hours , and a range of 0.5-24 hours.
- * Press it again to confirm the setting, the “ON (OFF)” will stop flashing.
- * If the timer button is not pressed longer than 10 seconds after the “ON (OFF)” start flashing, the timer setting will be exited.
- * If a timer setting is confirmed, pressing this button again will cancel it.

Note: When a ON timer is set, all function buttons (except SLEEP, DISPLAY and iFEEL can't be set) are valid and when the ON time set is up, the unit will operate as preset.

7. iCLEAN

- * Press this button with the unit OFF, the remote controller will display “CL” and the unit will automatically clean dust off the evaporator and dry it, to increase the cooling efficiency.
- * The iCLEAN function runs within an hour, during which if the unit is turned on with the remote controller or this button is pressed again, the iCLEAN will be deactivated.

Buttons description

8. ▲ or ▼

- * Each time the “▲” is pressed, the temperature setting will increase by 1°C and each time the “▼” is pressed, it will decrease by 1°C.
- * If the type of controller remote is YKR-H/101E or YKR-H/102E , setting temperature range is 16°C~32°C(60°F~90°F).

Note: The temperature cannot be set in AUTO or FAN mode, thus these two buttons are not functional.

9. Hi POWER

- * Press this button only in COOL mode to set Hi POWER on or off to speedy the cooling.
- * When Hi POWER is on, the air speed is HIGH.
- * When Hi POWER is off, the air speed will restore to previous status.

10. MODE

- * Press this button, you can select the running mode as follows:

□ AUTO → COOL → DRY → FAN □

Note: HEAT mode is not available for cool only units.

11. SLEEP

- * Press this button to enter SLEEP mode, which the unit will exit after 10 hours of continuous operation and restore to the previous status.

Note: The SLEEP function cannot be activated in FAN mode.

12. SWING ↑

- * Press this button to activate up/down swing and press it again to fix the swing position.

13. SWING ↔

- * Press this button to activate left/right swing and press it again to fix the swing position.

Buttons description

14. Anti-F

- * The Anti-F functions when the unit is turned off with the remote controller in COOL, DRY or AUTO mode. It will operate in HEAT mode (FAN mode for cool only units), with the internal fan running with weak flow for 3 minutes before stop, to remove the moisture within the evaporator so as to prevent it from giving off bad smell from mold.
- * This function is not set in the factory. You may set it or cancel it any time you want as follows: With both the unit and the remote controller OFF, point the remote controller at the unit and press “Anti-F” button once, the buzzer will sound 5 times after 5 times, indicating this function is set. Once set, this function will remain valid except when the unit is power off or until it is canceled.
- * To cancel Anti-F:
 1. Power off the unit.
 2. With both the unit and the remote controller OFF, point the remote controller at the unit and press this button once, the buzzer will sound 3 times after 5 times, indicating this function is canceled.

Note:

- * **With Anti-F activated, it is advised not to turn ON the unit again before it is fully OFF.**
- * **Anti-F function will be invalid when OFF timer is set.**


15. ECO

- * If this button is pressed in COOL mode, the unit will enter the ECO mode which has the lowest electricity consumption, and exit it automatically 8 hours after.
- * Changing modes or turning off the remote controller will automatically cancel the ECO function.
- * Press ECO button in ECO mode to exit this mode.

Note: The ECO mode only works for inverter units.

Usage

★ Fix batteries

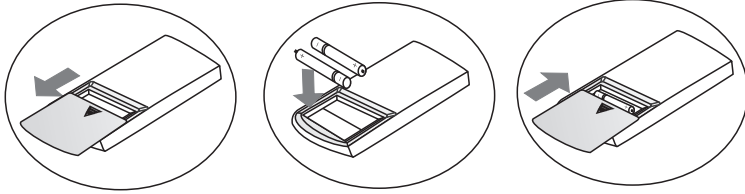

1. Slide to open the cover according to the direction indicated by the arrowhead.
2. Insert two brand new batteries (AAA), and position the batteries to the right electric poles (+ & -).
3. Put back the cover.

★ Automatic operation mode

1. Press the “MODE” button, select the automatic operation mode.
2. By pressing the “SPEED” button, you can select the fan speed from LOW, MID, HIGH, AUTO.
3. Press the “ON/OFF” button, the air-conditioner starts to operate.
4. Press the “ON/OFF” button again, the air-conditioner stops.

Note: In the fan operation mode, the temperature settings is non-effective.

★ Cooling operation mode

1. Press the “MODE” button, select the Cooling operation mode.
2. By pressing the “▲” or “▼” button, you can set the temperature, the display changes as you touch the button.
3. By pressing the “SPEED” button, you can select the fan speed from LOW, MID, HIGH, AUTO.
4. Press the “ON/OFF” button, the air-conditioner starts to operate.
5. Press the “ON/OFF” button again, the air-conditioner stops.

Note: The cold wind type has no heating function.

Usage

★ Fan operation mode

1. Press the “MODE” button, select the fan operation mode.
2. By pressing the “SPEED” button, you can select the fan speed from LOW, MID, HIGH.
3. Press the “ON/OFF” button, the air-conditioner starts to operate.
4. Press the “ON/OFF” button again, the air-conditioner stops.

Note: In the fan operation mode, the temperature settings is non-effective.

★ Drying operation mode

1. Press the “MODE” button, select the drying operation mode.
2. By pressing the “▲” or “▼” button, you can set the temperature, the display changes as you touch the button.
3. By pressing the “SPEED” button, you can select the fan speed from LOW, MID, HIGH, AUTO.
4. Press the “ON/OFF” button, the air-conditioner starts to operate.
5. Press the “ON/OFF” button again, the air-conditioner stops.

★ Backlight function (for remote controllers with such function only)

The remote controller has a backlight which can be turned on by pressing any button for the convenience of operation in darkness. The backlight will be automatically turned off if there is no operation within 10 seconds.


ข้อควรระวัง

- ก่อนใช้รีโมทคอนโทรลให้ติดตั้งแบตเตอรี่และตรวจสอบให้แน่ใจว่าขั้ว "+" และ "-" อยู่ในตำแหน่งที่ถูกต้อง
- การใช้รีโมทคอนโทรลควรชี้ไปที่ตัวรับสัญญาณและไม่มีสิ่งกีดขวาง โดยมีระยะห่างสูงสุด 8 เมตร
- ควรเก็บรีโมทคอนโทรลให้พ้นจากแสงแดดหรือความร้อนสูง และระวังอย่าให้น้ำหรือของเหลวหกใส่ หรือทำรีโมทคอนโทรลตกหล่น
- หากรีโมทคอนโทรลไม่ทำงานได้ตามปกติให้ถอดแบตเตอรี่ออก รอ 30 วินาที แล้วใส่แบตเตอรี่ใหม่ หากทำงานไม่ได้ให้เปลี่ยนแบตเตอรี่
- ควรเปลี่ยนแบตเตอรี่พร้อมกันทั้งชุด (ขนาด AAA 2 ก้อน)
- หากไม่ได้ใช้งานรีโมทคอนโทรลเป็นเวลานานให้ถอดแบตเตอรี่ออกก่อน
- ทิ้งแบตเตอรี่ในที่ทิ้งอย่างถูกต้อง

หมายเหตุ:

รีโมทคอนโทรลนี้มีปุ่มฟังก์ชันทั้งหมดอยู่ หากปุ่มฟังก์ชันใดไม่ทำงานหรือไม่มีการตอบสนอง ขึ้นอยู่กับรุ่นของเครื่องปรับอากาศที่คุณซื้อ

คำอธิบายปุ่ม

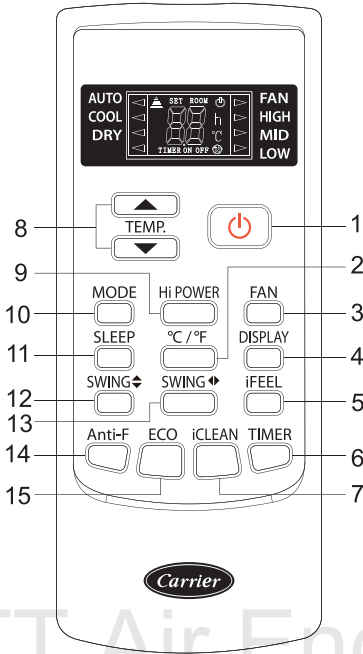

หมายเหตุ:
สัญลักษณ์ทั้งหมดบน
หน้าจอ
จะแสดงขึ้นชั่วคราว
ตอนใส่แบตเตอรี่
หลังจากนั้นจะแสดง
หน้าจอปกติ

1. [Power Button]

- * กดปุ่มนี้เพื่อเปิด/ปิดเครื่อง
- * การดำเนินการนี้จะล้างค่าตัวตั้งเวลาและการตั้งค่าการนอนหลับที่มีอยู่

2. °C/°F

- * ปุ่มนี้เพื่อตั้งค่าการแสดงผลอุณหภูมิเป็นฟาเรนไฮต์ และเซลเซียส (กดปุ่มอีกครั้งเพื่อคืนค่าการแสดงผล)

หมายเหตุ: ตัวเครื่องภายในบางรุ่นอาจไม่แสดงอุณหภูมิเป็นฟาเรนไฮต์ แต่ถ่านรีโมทคอนโทรลแสดงอุณหภูมิเป็นฟาเรนไฮต์ ตัวเครื่องอาจมีหน่วยเป็นเซลเซียส โดยฟังก์ชันและการทำงาน จะไม่ได้รับผลกระทบ

3. FAN

- * กดปุ่มนี้คุณสามารถเลือกความเร็วพัดลมได้ดังนี้:

[LOW - MID - HIGH]

หมายเหตุ: ความเร็วลมอัตโนมัติไม่สามารถใช้ได้โหมด "FAN"

คำอธิบายปุ่ม

4. DISPLAY

- * กดปุ่มนี้เพื่อเปิด/ปิดจอแสดงผลบนตัวเครื่องภายใน เพื่อไม่ให้แสงจากจอแสดงผลรบกวนขณะนอนหลับ

5. iFEEL

- * กดปุ่มนี้เพื่อแสดงอุณหภูมิแวดล้อมที่รีโมทคอนโทรลวางอยู่ หากกดอีกครั้งจะแสดงอุณหภูมิที่รีโมทคอนโทรลตั้งไว้

6. TIMER

- * ขณะเครื่องทำงาน กดปุ่มนี้เพื่อตั้งเวลาปิด ขณะเครื่องไม่ทำงานกดปุ่มนี้เพื่อตั้งเวลาเปิด
- * กดปุ่มนี้หนึ่งครั้ง "ON" หรือ "OFF" จะกะพริบ กด "▲" หรือ "▼" เพื่อตั้งค่าจำนวนชั่วโมงที่จะเปิดเครื่อง "ON" หรือ "OFF" โดยมีช่วงความละเอียด 0.5 ชั่วโมง
- * กดอีกครั้งเพื่อยืนยันการตั้งค่า "ON" หรือ "OFF"
- * หากไม่ได้กดปุ่มตั้งเวลานานกว่า 10 วินาทีหลังจาก "ON" หรือ "OFF" การตั้งค่าตัวตั้งเวลาจะถูกตัดออก
- * หากการตั้งค่าตัวตั้งเวลาได้รับการยืนยันแล้ว กดปุ่มนี้อีกครั้งจะยกเลิก

หมายเหตุ: เมื่อตั้งเวลาเปิดเครื่องปรับอากาศไว้

ฟังก์ชัน SLEEP, DISPLAY และ iFEEL จะไม่สามารถใช้งานได้

7. iCLEAN

- * กดปุ่มนี้ขณะปิดเครื่อง รีโมทคอนโทรลจะแสดง "CL" และเครื่องจะทำความสะอาดฝุ่นออกจากเครื่องและทำให้แห้งโดยอัตโนมัติ เพื่อเพิ่มประสิทธิภาพการทำความสะอาดเย็น
- * ฟังก์ชัน iCLEAN จะมีเวลาทำงานภายในหนึ่งชั่วโมงในระหว่างนั้น หากเปิดเครื่องด้วยรีโมทคอนโทรลหรือกดปุ่มนี้อีกครั้ง iCLEAN จะถูกปิดใช้งาน

คำอธิบายปุ่ม

8. ▲ หรือ ▼

- * กด "▲" การตั้งค่าอุณหภูมิจะเพิ่มขึ้น 1°C และกด "▼" จะลดลง 1°C
- * อุณหภูมิของรีโมทคอนโทรลคือ YKR-H/101E หรือ YKR-H/102E ช่วงอุณหภูมิการตั้งค่าคือ 16°C~32°C (60°F~90°F)

หมายเหตุ: ไม่สามารถตั้งอุณหภูมิในโหมดอัตโนมัติ (AUTO) หรือโหมดพัดลม (FAN) ได้ ดังนั้นปุ่มทั้งสองจะไม่ทำงาน

9. Hi POWER

- * กดปุ่มนี้ในโหมดทำความเย็น เพื่อเพิ่มแรงลมของตัวเครื่องภายในอาคาร
- * เมื่อกดปุ่มนี้ ความเร็วลมจะสูง
- * เมื่อกดปุ่มนี้อีกครั้ง ความเร็วลมจะกลับคืนสู่ค่าก่อนหน้า

10. MODE

- * กดปุ่มนี้คุณสามารถเลือกโหมดการทำงานได้ดังนี้:

☐ AUTO → COOL → DRY → FAN ☐

11. SLEEP

- * กดปุ่มนี้เพื่อเข้าโหมด SLEEP และหลังจากทำงานต่อเนื่องได้ 10 ชม. การทำงานจะกลับคืนสู่สถานะก่อนหน้า

หมายเหตุ: ฟังก์ชัน SLEEP ไม่สามารถเปิดใช้งานได้ในโหมดพัดลม (FAN)

12. SWING ↑ ↓

- * กดปุ่มนี้เพื่อบังคับทิศทางลมขึ้นลงแบบอัตโนมัติ กดซ้ำอีกครั้งจะกลับคืนสู่ปกติ

คำอธิบายปุ่ม

13. SWING ↔

- * กดปุ่มนี้เพื่อบังคับทิศทางลมซ้าย-ขวาแบบอัตโนมัติ กดซ้ำอีกครั้งจะกลับคืนสู่ปกติ

14. Anti-F

- * เมื่อปิดเครื่องด้วยรีโมทคอนโทรล พัดลมจะทำงานเป็นเวลา 3 นาที เพื่อลดความชื้นที่คอยล์เย็น ป้องกันไม่ให้เกิดกลิ่นอับ
- * ฟังก์ชันนี้ไม่ได้ตั้งมาจากโรงงาน สามารถทำการติดตั้งได้ดังนี้: เครื่องและรีโมทคอนโทรลอยู่ในสถานะปิด กดปุ่มนี้โดยชี้รีโมทไปที่เครื่อง จะได้ยินเสียงดัง 5 ครั้ง
- * หากทำซ้ำในขบวนการเดิมจะได้ยินเสียงดัง 3 ครั้ง เป็นการยกเลิกฟังก์ชันนี้


15. ECO

- * หากกดปุ่มนี้ในโหมด COOL เครื่องจะเข้าสู่โหมด ECO ซึ่งใช้พลังงานไฟฟ้าต่ำที่สุดและออกจากโหมดโดยอัตโนมัติ 8 ชั่วโมงหลังจากนั้น
- * การเปลี่ยนโหมดหรือปิดรีโมทคอนโทรลจะยกเลิกฟังก์ชัน ECO โดยอัตโนมัติ
- * กดปุ่ม ECO ในโหมด ECO เพื่อออกจากโหมดนี้

หมายเหตุ: โหมด ECO ใช้ได้กับเครื่องปรับอากาศแบบอินเวอร์เตอร์เท่านั้น

การใช้งานรีโมท

★ การใส่แบตเตอรี่

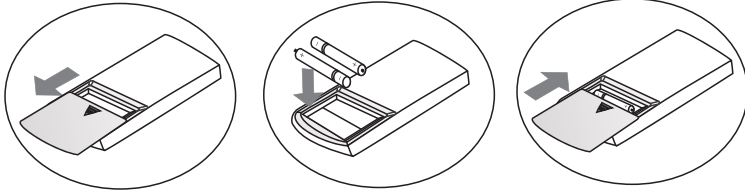

1. ถอดฝาครอบช่องใส่แบตเตอรี่รีโมท
2. ใส่แบตเตอรี่รีโมท (ขนาด AAA) 2 ก้อน โดยหันขั้วแบตเตอรี่รีโมทตามตำแหน่ง (+) และ (-)
3. ใส่ฝาครอบกลับเข้าไป

★ โหมดการทำงานอัตโนมัติ

1. กดปุ่ม "MODE" เลือกโหมดการทำงานอัตโนมัติ
2. เมื่อกดปุ่ม "SPEED" คุณสามารถเลือกความเร็วพัดลมจาก LOW, MID, HIGH, AUTO
3. กดปุ่ม "ON/OFF" เครื่องปรับอากาศจะเริ่มทำงาน
4. กดปุ่ม "ON/OFF" อีกครั้งเครื่องปรับอากาศจะหยุดลง

หมายเหตุ : ในโหมดพัดลม (FAN) จะไม่สามารถตั้งค่าอุณหภูมิได้

★ โหมดการทำความเย็น

1. กดปุ่ม "MODE" เลือกโหมดการทำงาน Cooling
2. เมื่อกดปุ่ม "▲" หรือ "▼" คุณสามารถตั้งอุณหภูมิ
3. เมื่อกดปุ่ม "SPEED" คุณสามารถเลือกความเร็วพัดลม (FAN) จาก LOW, MID, HIGH, AUTO
4. กดปุ่ม "ON/OFF" เครื่องปรับอากาศจะเริ่มทำงาน
5. กดปุ่ม "ON/OFF" อีกครั้งเครื่องปรับอากาศจะหยุดลง

หมายเหตุ : เครื่องแบบทำความเย็นอย่างเดียว จะไม่มีฟังก์ชันทำลมร้อน

การใช้งานรีโมท

★ โหมดการทำงานพัดลม (FAN)

1. กดปุ่ม "MODE" เลือกโหมดการทำงานของพัดลม (FAN)
2. เมื่อกดปุ่ม "SPEED" คุณสามารถเลือกความเร็วพัดลมจาก LOW, MID, HIGH
3. กดปุ่ม "ON/OFF" เครื่องปรับอากาศจะเริ่มทำงาน
4. กดปุ่ม "ON/OFF" อีกครั้งเครื่องปรับอากาศจะหยุดทำงาน

หมายเหตุ: ในโหมดพัดลมจะไม่สามารถตั้งค่าอุณหภูมิได้

★ โหมดการทำงานลดความชื้น (DRY)

1. กดปุ่ม "MODE" เลือกโหมดการทำงานลดความชื้น (DRY)
2. เมื่อกดปุ่ม "▲" หรือ "▼" คุณสามารถตั้งอุณหภูมิ จอแสดงผลจะเปลี่ยนเมื่อคุณแตะปุ่ม
3. เมื่อกดปุ่ม "SPEED" คุณสามารถเลือกความเร็วพัดลมจาก LOW, MID, HIGH, AUTO
4. กดปุ่ม "ON/OFF" เครื่องปรับอากาศจะเริ่มทำงาน
5. กดปุ่ม "ON/OFF" อีกครั้งเครื่องปรับอากาศจะหยุดลง

★ ฟังก์ชันแบ็คไลท์ (สำหรับรีโมทคอนโทรลที่มีฟังก์ชันดังกล่าวเท่านั้น)

รีโมทคอนโทรลมีไฟแบ็คไลท์ซึ่งสามารถเปิดได้โดยกดปุ่มใดก็ได้เพื่อความสะดวกในการใช้งานในที่มืด ไฟแบ็คไลท์จะถูกปิดโดยอัตโนมัติหากไม่มีการทำงานภายใน 10 วินาที

